

---

# CY-PM StageLite 6

## User Manual



Read the instructions carefully before use

---

## Catalogue

1. Precautions and installation .....	1
1.1 Declaration .....	1
1.2 Maintenance .....	1
1.3 Product precautions .....	1
1.4 Product Introduction .....	1
1.5 Connecting Signal Cables .....	2
1.6 Lighting Installation .....	2
2. Control panel .....	4
2.1 Key Instructions .....	4
2.2 Main Menu .....	5
2.2.1 DMX Settings .....	5
2.2.2 Switching between Medium and En .....	5
2.2.3 Luminaire information .....	6
2.2.4 Lighting Settings .....	7
2.2.5 Running mode .....	8
2.2.6 Factory Settings .....	9
3. Channel function .....	10
3.1 Channel Table .....	10
4. Common Fault .....	13

---

# 1. Precautions and installation Precautions and installation

## 1.1 DISCLAIMER

Thank you for choosing our products! 8, This product is in good condition and the package is complete when it leaves the factory. For your safe and effective use of this product, before you use this product, please read this manual carefully and completely. This manual contains important information for installation and use. Please install and operate according to the requirements of the manual. At the same time, please keep this manual properly for use at any time. Our company does not assume all responsibility for damage to lamps or other performance due to individuals not operating in accordance with the instructions during installation, use and maintenance.

This manual is subject to technical changes without prior notice.

## 1.2 Maintenance

- Disconnect the power supply before performing maintenance.
- This lamp should be kept dry and avoid working in wet environment.
- Intermittent use will effectively extend the life of the luminaire.
- In order to obtain good ventilation and lighting effects, pay attention to cleaning the fan and fan net as well as the lens often.
- Do not rub the luminaires housing with organic solvents such as alcohol to avoid damage.




## 1.3 Product Precautions

- This light fixture is for professional use only.
- Ensure that the power supply voltage matches the required power supply voltage of the equipment before operation.
- Do not place this product in a place that is easy to loose or shake.
- During use, if the lamp is abnormal, stop using the lamp in time.
- In order to ensure the service life of the product, this product should not be placed in a humid or leaking place, and should not work in an environment where the temperature exceeds 60 degrees.
- When the lamp is used, the power supply voltage change should not exceed  $\pm 10\%$ , the voltage is too high, will shorten the life of the lamp, the voltage is too low, it will affect the light color of the lamp.
- After the power off, it takes 20 minutes to use the lamp to cool down fully before it can be used again.
- The rotating parts of the lamp and the attaching accessories must be checked regularly, and the loosening and shaking should be reinforced in time to prevent accidents.
- In order to ensure the normal use of this product, please read this instruction carefully.

## 1.4 Product Description

- Light source power: W;
- Voltage: AC 200V~240V/50~60Hz;
- Color disk: 5 colors + open position+CTO;
- Pattern plate: Fixed Gobos: 7 fixed gobos+5glass gobos+Open;

- 540° pan, 270° tilt.
- Overheat protection;
- Control mode: DMX512/ master-slave/automatic;
- IP20 protection level

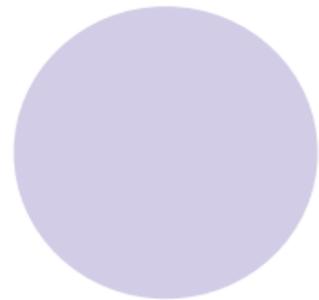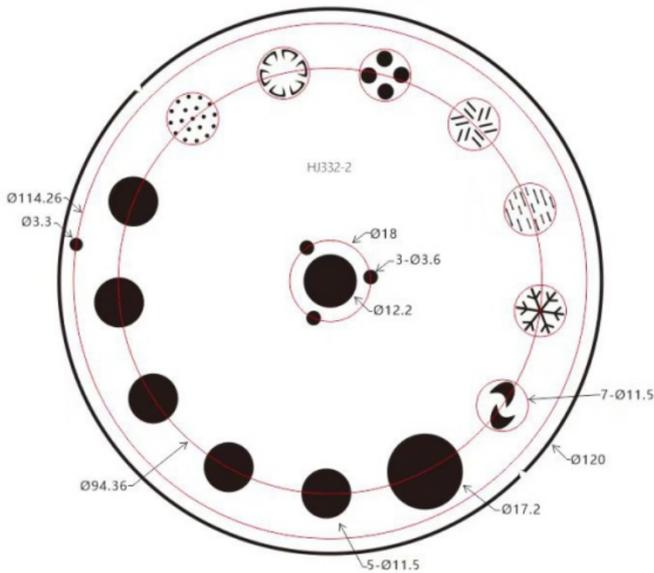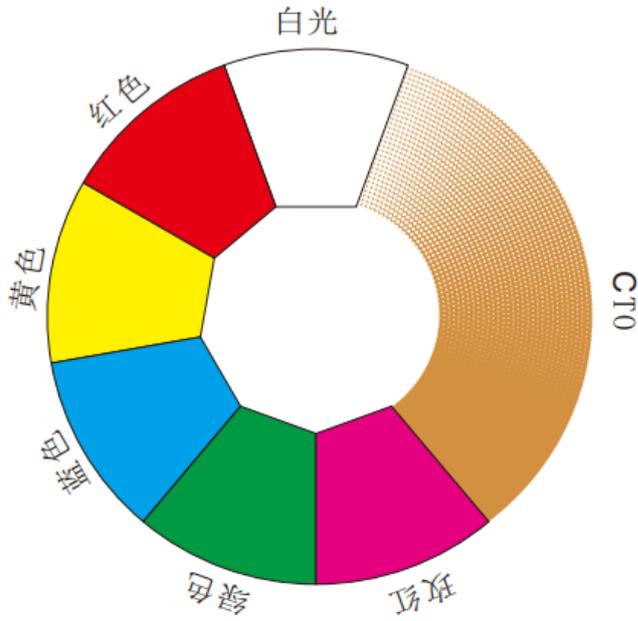

显指片

HJ332-2  
0.7铝 外Ø120 图案Ø11.5 白光Ø17.2 中心距47.18 正面高温  
2024-09-13



15\*15\*内10.5

## 1.5 Signal cable connection

Light fixtures feature standard DMX input and output 3-core or 5-core XLR sockets. Use a twisted-pair signal cable shielded specifically for DMX 512; The signal line is generally connected at a distance of 150 meters, and the DMX512 signal amplifier must be added for long distance signal transmission.

Use a shielded twisted-pair signal line from the DMX outlet of the controller to the DMX input of the first device, and from the DMX outlet of the first device to the DMX input of the second device, and so on, until all the lamps are connected. Then install a terminal plug on the last 3-pin connector of the connecting luminaire output on each line. (Weld a 4/1W, 120Ω resistor between the 2 and 3 pins of the 3-pin pin cannon plug).

Important: The wires should not touch each other or the metal housing.

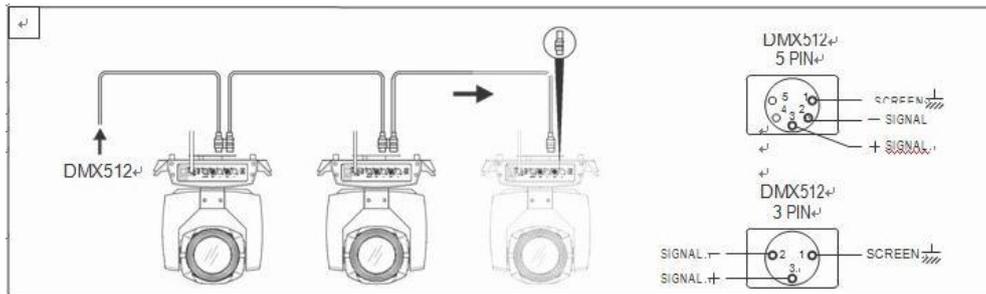


Figure 1 Schematic diagram of DMX signal wire connection

➤ The calculation method of the starting address code of the lamp:

The initial address code of the current luminaire is equal to (the initial address code of the previous luminaire)+(the number of channels of the luminaire)

1: The initial address code value of the first luminaire A001.

2: The basic channel number of the controller should be greater than or equal to the total number of channels used by the luminaire.

3: Note: when using any controller, each luminaire should have its own starting address code, if the first luminaire's starting address code is set A001, the number of luminaire channels is 16CH; Then the starting address code of the second lamp is set to A017; The starting address code of the third lamp is set to A033; And so on, (this setting also needs to be determined according to different consoles)

## 1.6 Luminaire installation

The luminaire can be placed horizontally, hung diagonally and hung upside down. Be sure to pay attention to the installation method when hanging diagonally and upside down.

As shown in Figure 2, before positioning the luminaire, it is necessary to ensure the stability of

the installation site. During the reverse hanging installation, it is necessary to ensure that the luminaire does not fall down on the support frame. It is necessary to use the safety rope to pass through the support frame and the luminaire handle for auxiliary hanging to ensure safety. Prevent the luminaire from falling and sliding.

During the installation and debugging of the lamps, pedestrians are forbidden to pass under the lamps. Regularly check whether the safety rope is worn and whether the hook screws are loose.

If the hanging installation is not stable, resulting in the fall of the lamp and all the consequences, our company does not assume any responsibility.


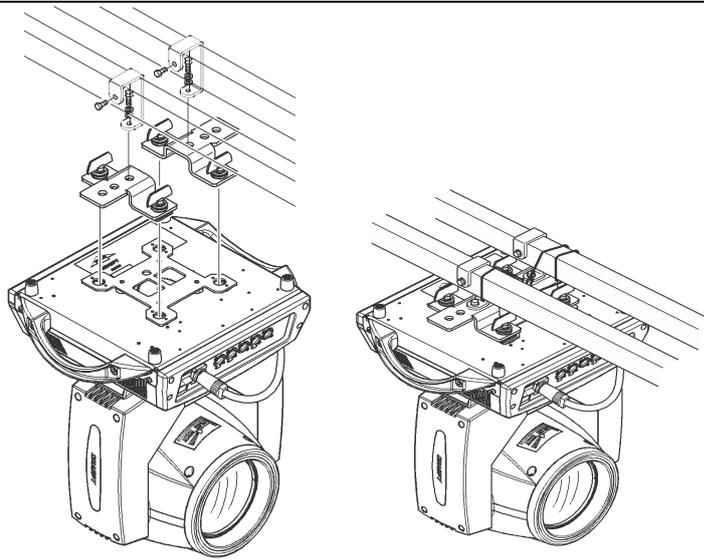


Figure 2 Schematic diagram of the lamp hanging up and down

## 2. Control panel

### 2.1 Key Instructions

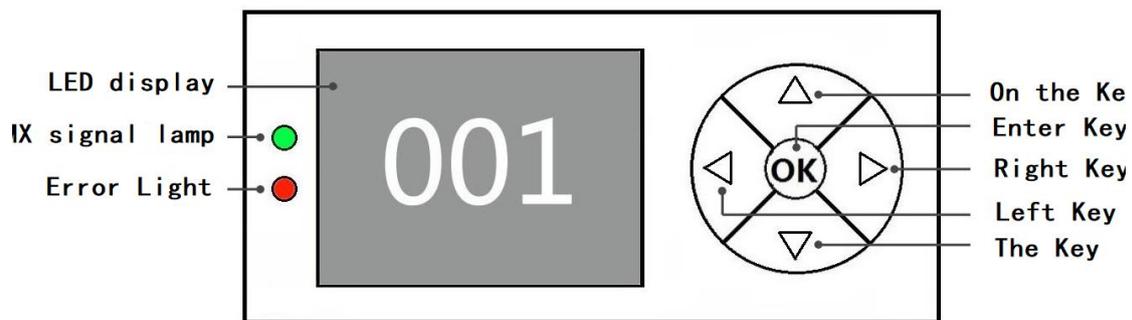

The function of the left and right keys is the same: return to the previous interface

Up, down keys: Select, edit

OK Key: Perform function, start edit, exit edit

Figure 3 Schematic diagram of key description on the panel

The following takes "Modify DMX address code" as an example to describe the use of keys:

- 1, if the current is not the main interface, press the "left" key (one or more times) to return to the main interface
- 2, in the home screen, press the "up" key or "down" key to select the "Settings" button
3. Press the "OK" key to enter the "Settings" interface
- 4, in the "Settings" interface, press the "up" key or "down" key to select "DMX address"
- 5, press the "OK" key to enter the editing state
- 6, press the "up" key or "down" key to modify the DMX address code

- 7, press the "OK" key to exit the editing state
8. Press the right button on the main screen to enter the calibration menu shortcut.

## 2.2 Menu Description

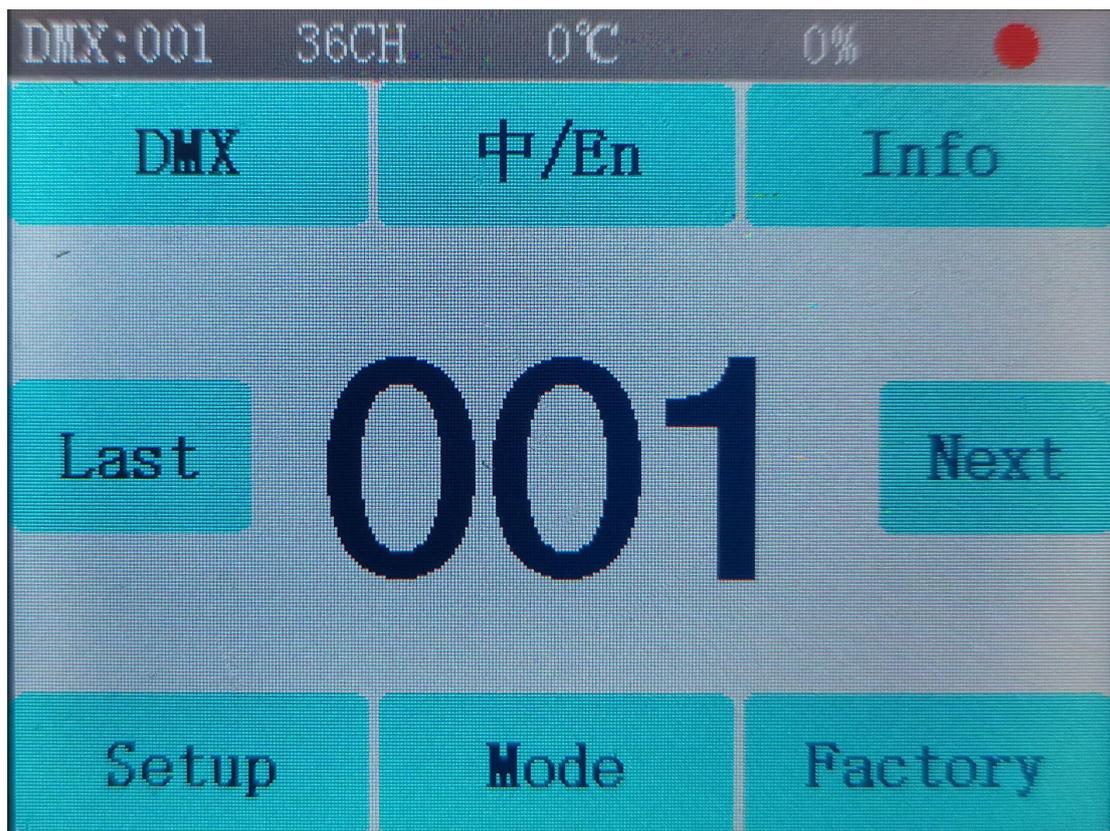


Figure 4 Schematic diagram of main menu

### 2.2.1 DMX Settings

Key description: Press up or down is +1 or -1 mode; Press one or the next one, quickly adjust the address code mode; Press the confirm key to return

Manual instructions: Enter the hundreds place first, then the tens place, and finally the one place. (For example: enter the 286 address code, it will first point 2, then point 8, and finally point 6)

### 2.2.2 In /En

Chinese/English interface switch;

## 2.2.3 System information

Options	Instructions	
System version	DIS	Display board software version
	MT	Motor board software version
Temperature information		Display lamp bead temperature
Fan information	Fan speed	Display fan speed information
System time	Total Bright bubble	Cumulative brightening time (accurate to minute)
	This brightening bubble	Time of this shining bubble (accurate to minute)
	Total usage time	Total usage time (accurate to minute)
	Time of use	Use time since this turn on (accurate to minutes)
	Date of manufacture	
	Duration of permission	9999 means no encryption and can be used for a long time. Other values indicate the remaining use time, with encryption;
Sensor monitoring	X Hall	0 when magnetic is detected, 1 otherwise
	Y Hall	0 when magnetic is detected, 1 otherwise
	Color disk Hall	0 when magnetic is detected, 1 otherwise
	CMY Hall	0 when magnetic is detected, 1 otherwise
	CTO Hall	0 when magnetic is detected, 1 otherwise
	Fix pattern panl	0 when magnetic is detected, 1 otherwise
	Glass pattern Hall	0 when magnetic is detected, 1 otherwise
	Glass pattern rotation Hall	0 when magnetic is detected, 1 otherwise
	Focus Hall	0 when magnetic is detected, 1 otherwise
	Enlarge Hall	0 when magnetic is detected, 1 otherwise
	Prism l Rotate the Hall	0 when magnetic is detected, 1 otherwise
	X code disk status	2 digits, each corresponding to a photoelectric switch in the code disk
	Y code disk status	2 digits, each corresponding to a photoelectric switch in the code disk
	X-axis encoding disk step value	When traveling in the forward direction, the step value should increase, and when traveling in the reverse direction, the step value should decrease. The number should be normal every time you reach the same point
The Y-axis	The step value should increase in the	

	encodes the disk step value	forward direction and decrease in the reverse direction. The number should be normal every time you reach the same point
System Error		If the red ERR indicator light shines, it indicates that the lamp is running incorrectly, and the details can be viewed from this sub-interface. After viewing, you can press the "Clear" button to clear the error record
DMX channel value monitoring		From this, the sub-interface is entered and the channel value is displayed in numerical and percentage terms for viewing

Common Error Messages	Instructions	
MT board connection failed	Motor board not responding. There is a problem with the serial communication line connecting the display board to the motor board, or there is a problem with the motor board.	
X-axis reset failed	There is a problem with the X-axis photoelectric switch, or the X-axis motor or motor board	
Y-axis reset failed	Y-axis photoelectric switch, or Y-axis motor or motor board problem	
X-axis Hall error	X-axis Hall, or a problem with the motor board	
Y-axis Hall error	Y-axis Hall, or motor board problem	
Color disk reset failed	Color disk Hall, or there is a problem with the color disk motor	
The pattern plate failed to reset	Pattern plate Hall, or pattern plate motor has a problem	
The focus reset failed	Focusing Hall, or a problem with the focusing motor	

## 2.2.4 Light fixture setup

Options	Instructions	
DMX Channel	30CH	30 Channel mode
Working mode	Standard	Standard mode is suitable for outdoors
	theater	Suitable for indoor high floors
	Film and television	Suitable for indoor small space environment
Language	Chinese	Set to the Chinese interface

	English	Set to English interface
Screen flip	close	Front display
	open	Screen inverted display
Screen auto-flip	close	Disable the automatic rollover function
	open	Gravity sensing auto flip
Dimming curve	Square	Index
	linear	Linear
	SCurve	Sines
	InSquare	Logarithm
RDM function	close	Turn on the RDM function
	open	Disable the RDM function
DMX Signal	Hold	Continue running in its original state
	Reset	Turn the motor back and stop running
Screensaver	close	Turn off screensaver
	open	Turn on screensaver
Light pursuit mode	close	Off
	Mode 1	No power in XY Light pursuit mode
	Mode 2	XY Light pursuit mode with very little force
X Reversal	close	Default
	open	Switch start and end points
Y Reversal	close	Default
	open	Switch start and end points
XY swap	close	Default
	open	Channel for switching XY axes (including fine tuning)
XY encoder	open	Use an encoder (optocoupler) to judge out of step and automatically correct the position
	close	Correct position without using an encoder (optocoupler)
Restore default Settings		Press "OK" to see the confirmation dialog box, press "OK" again to restore the default Settings

## 2.2.5 Run Mode

Self-walking mode	DMX	Slave state: Receives DMX signals from the console or host
	Bootstrap	Host status: Self-drive and send DMX signal to slave
	Scenario 1, 2, 3	Turn on scene Self Walk
	Programming 1, 2, 3	Call console programmed program self-walk
Scene run	All	All open scenes run sequentially
	1-5	Call a scene run separately
Scene setup	Scene channel Save	Edit number Press the confirm key to save (Display: saving)
	Multi-step scene	1, 2, 3; There are three groups

	group	
	Scene step selection	Under the current group, switch to the number of steps you want to edit
	Scene time (s)	1-100; Total time for each step to run
	Scene delay (%)	0-100; Gradient percentage, where 0 is a direct jump;
	Scene run	When turned on, all running modes can be invoked; Off can only be called individually
	1-36 channel values	
Console Programming	Programming 1, 2, 3	Switch the program location to record, press the confirm button to enter the programming record interface, need to connect the console
	Time (S)	Set running time for each 1 step
	Number of steps	Current step of the program
	Clear data	Clear all data in the current program
Console Programming >> Programming interface		Adjust the number of steps up and down, connect the console to save;

**Manual control (Click the operation mode menu on the main interface, select the item of manual control, press confirm to enter manual control)**

This interface is used to control the current lamp, while automatically entering the host state (does not receive DMX signal, self-walking mode is the host, sends DMX signal to the bus to the slave machine).

The manual menu will display 36 channels according to the standard 36 channels set in the setting menu.

Options	Instructions	
1CH. X	0 ~ 255	Press "OK" to enter the editing state. At this time, the hundreds digit is selected, and press the "up" and "down" keys to change the channel value. Press the "OK" key again to select the tens edit. Press "OK" again to select the ones edit. Press again to exit the editing state
.....	0 ~ 255	
	0 ~ 255	
		Press "OK" to see the confirmation dialog box, press "OK" again to enter the reset interface, all motor reset

ALL reset		Press "OK" to see the confirmation dialog box, press "OK" again to enter the reset interface, all motors reset
XY reset		Press "OK" to see the confirmation dialog box, press "OK" again to enter the reset interface, XY reset
MT reset		Press "OK" to see the confirmation dialog box,

		press "OK" again to enter the reset interface, the small motor reset
--	--	--

### 2.2.6 Factory Settings

Options	Instructions	
Motor Calibration	X-axis	After entering the sub-interface, the reset position of the motor such as X axis and Y axis can be adjusted to make up for the error on the hardware installation. The adjustment range is -128~+127, and +0 indicates no adjustment.
	Y-axis	
	Color	
	Gobo	
	Clear finger zero	
	Apparent finger stroke	
	Temperature	
	Cyan	
	Magenta	
	Yellow	
	Focus	
	Blow up	
	Zoom in on travel	
	Fog zero	
	Frost formation	
	Cutting rotary plate	
	Cut 1	
	Cut 2	
	Cut 3	
Cut 4		
Cut 5		
Cut 6		
Cut 7		
Cut 8		
XY speed adjustment	X-axis speed	000-255, slow to fast adjustment
	Y-axis velocity	
Fan adjustment	Fan regulation	Only do temporary adjustment, power is not saved
	Fan speed	

## 3. Channel function

---

### 3.1 Channel Table

30 Channels	
1	X
2	X Fine
3	Y
4	Y Fine
5	XY Speed
6	Cut
7	Dimming
8	Dimming Fine
9	C
10	M
11	Y
12	CTO
13	Color
14	Gobo
15	<b>Display sheet</b>
16	Frost
17	Focus
18	Focus Fine
19	Zoom
20	Zoom Fine
21	Cut 1
22	Cut 2
23	Cut 3
24	Cut 4
25	Cut 5
26	Cut 6
27	Cut 7
28	Cut 8
29	Cut Wheel
30	Features

# Channel parameter values (full version) :

30 channels	Names	Numerical value	Description
CH1	X	0-255	0-540 degrees
CH2	X Fine	0-255	0-2 degrees
CH3	Y	0-255	0-270 degrees
CH4	Y Fine	0-255	0-1 degrees
CH5	XY Speed	0-255	Fast to slow
CH6	Shutter	0-3	Light Off
		4-127	Slow to fast Normal strobe
		128-191	Bisector strobe from slow to fast
		192-251	Random strobe from slow to fast
		252-255	Turn On Light
CH7	Dimming	0-255	0-100% dimming
CH8	Dimming Fine	0-255	
CH9	C	0-255	
CH10	M	0-255	
CH11	Y	0-255	
CH12	CTO	0-255	
CH13	Colors	0-127	Linear colors
		128-137	Color 1
		138-146	Color 2
		147-155	Color 3
		156-164	Color 4
		165-173	Color 5
		174-182	Color 6
		183-191	Color 7
		192-222	Flowing water from fast to slow
		223-224	Stop
225-255	Flow backward from slow to fast		
CH14	Gobo	0-4	White light
		5-9	Gobo 1
		10-14	Gobo 2
		15-19	Gobo 3
		20-24	Gobo 4
		25-29	Gobo 5
		30-34	Gobo 6 <sup>12</sup>
35-39	Gobo 7		

		40-44	Gobo 8
		45-49	Gobo 9
		50-54	Gobo 10
		55-59	Gobo 11
		60-64	Gobo 12
		65-69	Gobo 1 Shake
		70-74	Gobo 2 Shake
		75-79	Gobo 3 Shake
		80-84	Gobo 4 Shake
		85-89	Gobo 5 Shake
		90-94	Gobo 6 Shake
		95-99	Gobo 7 Shake
		100-104	Gobo 8 Shake
		105-109	Gobo 9 Shake
		110-114	Gobo 10 Shake
		115-119	Gobo 11 Shake
		120-124	Gobo 12 Shake
		125-190	Forward flowing water from fast to slow
		191-255	Backward flow from slow to fast
<b>CH15</b>	<b>Display sheet</b>	0	None
		1-255	0-100% linear insertion
<b>CH16</b>	<b>Frost</b>	0-127	None
		128-255	Frost cut in
<b>CH17</b>	<b>Focus</b>	0-255	From far to near
<b>CH18</b>	<b>Focus Fine</b>	0-255	
<b>CH19</b>	<b>Zoom</b>	0-255	Go small to big
<b>CH20</b>	<b>Zoom Fine</b>	0-255	
<b>CH21</b>	<b>Cut 1</b>	0-255	Linear insertion
<b>CH22</b>	<b>Cut 2</b>	0-255	Linear insertion
<b>CH23</b>	<b>Cut 3</b>	0-255	Linear insertion
<b>CH24</b>	<b>Cut 4</b>	0-255	Linear insertion
<b>CH25</b>	<b>Cut 5</b>	0-255	Linear insertion
<b>CH26</b>	<b>Cut 6</b>	0-255	Linear insertion
<b>CH27</b>	<b>Cut 7</b>	0-255	Linear insertion
<b>CH28</b>	<b>Cut 8</b>	0-255	Linear insertion
<b>CH29</b>	<b>Cut Wheel</b>	0-255	Slicing Angle
<b>CH30</b>	<b>Features</b>	0-100	Light Chase default (follow Settings)
		101-110	Light Chase off, hold for 5s, do not change the interface Settings
		111-120	In Light pursuit mode 1, hold for 5s without changing the screen Settings
		121-130	In Light pursuit mode 2, hold for 5s without changing the screen Settings

---

		210-215	Reset XY
		220-235	Reset Effect
		240-255	Reset All

#### 4. Common Faults

According to some common faults, the corresponding solutions are put forward. Any problems that cannot be solved should be dealt with by professionals. Disconnect the light fixture from the power supply before maintaining it.

1. The bulb doesn't work.
  - Check that the voltage that matches the light fixture is installed;

- 
- Check whether the lamp power supply connection or control switch is in poor contact;
  - Check whether the power supply is insufficient;
  - Check that the DMX512 controller is sending instructions.

2. The light fixture does not accept control from the console after normal reset

- Check luminaire digital start address value and function options are correct;
- Check whether the connection of the communication control line is correct, the communication line is too long or has been interrupted;
- Check whether the control equipment is invalid, check whether the signal amplifier connected to the series is invalid;
- Check whether the communication line is too long or other devices interfere with each other;
- Optimize wiring, shorten the length of the control signal line, high-voltage and low-voltage lines separate wiring;
- Add signal amplifiers;
- Signal line using high quality shielded twisted pair wire;
- Connect the signal terminal resistor (120 ohms) at the end of the lamp.

3. Luminaire does not start

- Check that the power supply parameters are consistent with the luminaire;
- Check the lamps in the long-distance transportation process due to extrusion deformation, internal parts vibration, moisture and other reasons, resulting in poor contact  
Or fall off.
- Please check whether the internal wire integration connector of the lamp has fallen off and is loose.
- Check whether the electronic components of the lamp (such as electronic transformer, PCB board, motor control board, etc.) are loose, short circuit and burned out.

4. When working, the action of the X axis or Y axis of the luminaire is abnormal

- Check them one by one by following the previous step;
- Check whether the transmission belt corresponding to the X and Y axis direction in the lamp falls off and breaks;
- Check whether the data feedback receiver (optocoupler) corresponding to the X and Y directions in the lamp is damaged;
- Restart and reset once.